



INSTALLATION INSTRUCTIONS

J-Hook Series

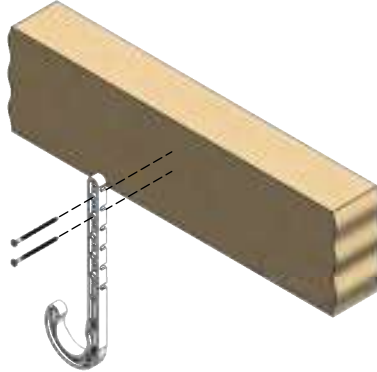

INSERT 2 NAILS THROUGH J-HOOK
TO SECURE TO FRAMING.
(FIG. 1)

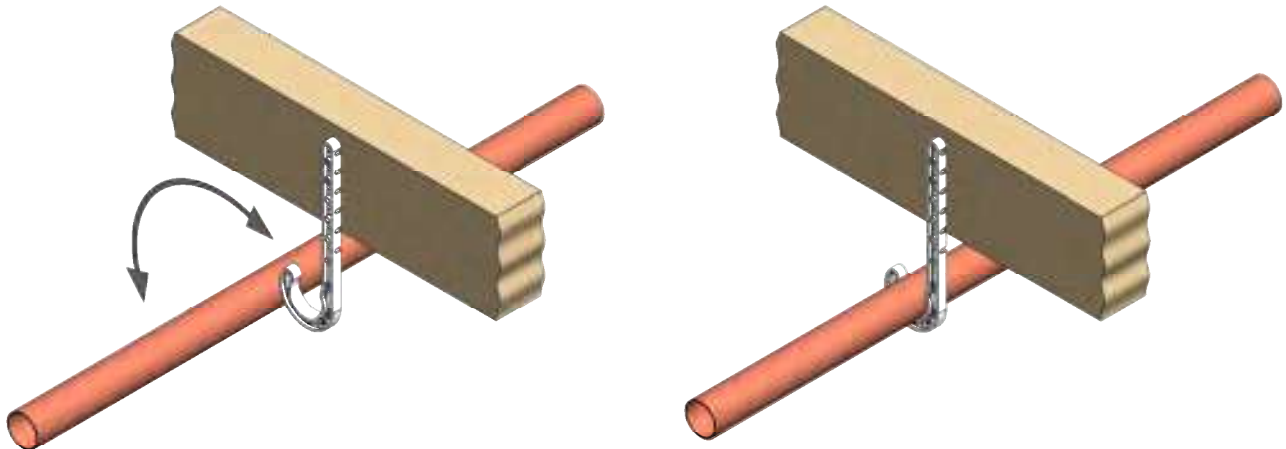

INSERT PIPING ONTO J-HOOK, AND PUSH DOWN
TO SNAP PIPE SECURELY INTO CRADLE.
(FIG. 2A & 2B)

THIS INFORMATION IS PROPRIETARY TO HOLDRITE AND IS SUBJECT
TO CHANGE WITHOUT NOTICE. IT MAY NOT BE REPRODUCED IN
PART OR WHOLE WITHOUT WRITTEN AUTHORIZATION.

