

INSTALLATION INSTRUCTIONS THROUGH STUD SERIES - 161, 162 & 163

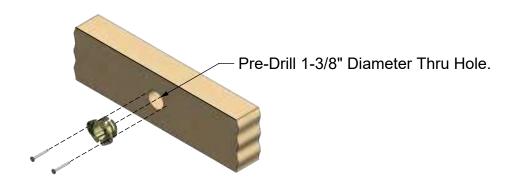

INSERT 2 NAILS TO THROUGH STUD TO SECURE TO FRAMING. (FIG. 1)

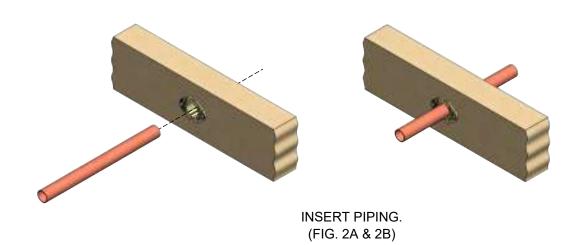

THIS INFORMATION IS PROPRIETARY TO HOLDRITE AND IS SUBJECT TO CHANGE WITHOUT NOTICE. IT MAY NOT BE REPRODUCED IN PART OR WHOLE WITHOUT WRITTEN AUTHORIZATION.

